

TVONICS

Freeview*

Quick start Guide for your digital TV Receiver



This is in Easy Read




This information tells you how to set up your digital TV receiver.

This is what you should have.

This is the digital TV receiver.



These are the rubber feet.

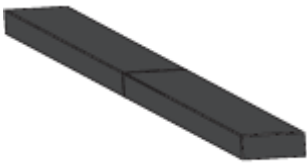

This is the remote control.




These are the batteries.






This the cable for the power supply.

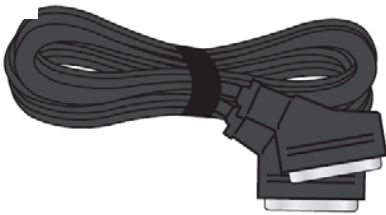

This is the SCART lead.

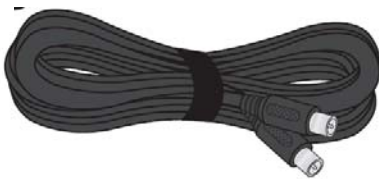

This is the RF cable.

You should also have:

- a user guide

Please follow the steps on the next pages.


Putting batteries into the remote control.



This is the remote control.




These are the batteries

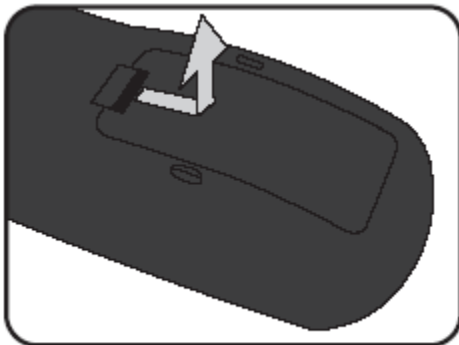

Open up the back of the remote control.

This is where you put the batteries in.

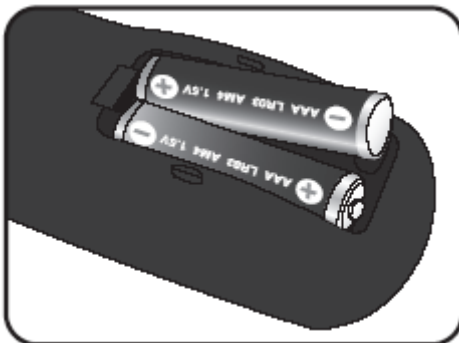


Put the batteries in.

You will see + and -. These tell you which way round the batteries go

Put the cover back on.

Putting the rubber feet on.

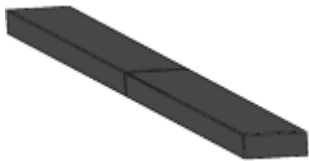

These are the rubber feet.

They go on the bottom of your receiver.

Turn your receiver upside down.

This picture shows you where they should go.




Important:
Make sure your TV is turned off and unplugged. Make sure all your new equipment is turned off and unplugged.

Have a look at the back of your TV.
Is there a place where you can plug in the SCART lead?

There might not be if your TV is old.

This is a SCART lead.

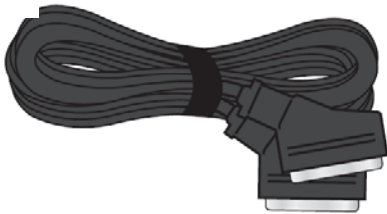

It has a big flat head.






Yes - I can plug a SCART lead in.
Follow these steps.

A socket is where you plug in cables and leads.

Plug the SCART lead into your receiver where it says TV.
Plug the other end of the SCART lead into your TV.

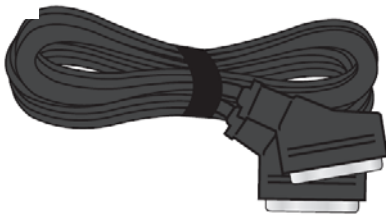


This is a SCART lead.

Take the aerial lead out of your TV. Plug it in to the back
of your receiver where it says IN.

Then plug one end of the RF cable in where it says OUT.

Plug the other end into the RF IN socket on your TV or
VCR/DVD.

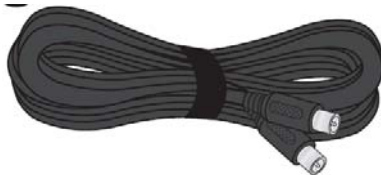

This is the RF lead.

You will need another SCART lead.
You will have to get this yourself.

Plug a SCART lead in to your VCR/DVD.
Plug the other end into your receiver where it says
VCR/DVD.

Plug the mains lead into the back of the receiver.



This is the mains lead.

Plug your receiver in at the wall.

Important

Always put the mains lead into the receiver before you
plug it and switch it on.

Don't cut the plug off the lead for the power supply.




No – I can't plug a SCART lead in.
Follow these steps.

A socket is where you plug in cables and leads.

Take the aerial lead out of your TV. Plug it in to the back of your receiver where it says IN.

Plug the RF cable into your receiver where it says OUT. Plug the other end into your TV.

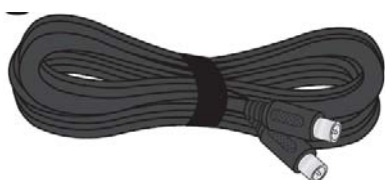

This is the RF cable

Plug the mains lead into the back of the receiver.



This is the mains lead.

Plug your receiver in at the wall.

Important


Always put the mains lead into the receiver before you plug it and switch it on.

Don't cut the plug off the lead for the power supply.

You will need to set up a channel on your TV that you don't use for the receiver to work. It will go straight to channel 38. If you use this channel your user guide will tell you what you need to do.

The first time you turn your receiver on.

The first time you turn your receiver on you will get a welcome screen come up on your TV.

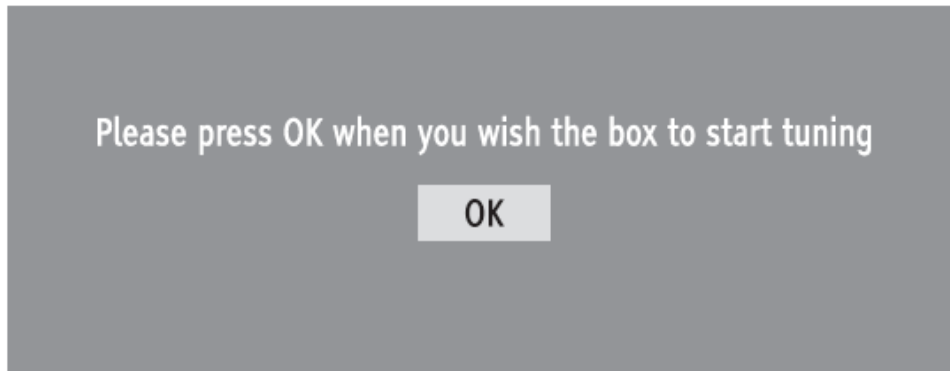

[OK] Press the OK button on the remote control.



Your receiver will now start to find all the TV and radio channels. This is called tuning in.

[OK] When it is finished a different screen will come up on your TV. Press the OK button on the remote control to get rid of this.



You can now start to enjoy digital TV and radio.